

Room 230B (PC – Crestron Touch Panel) - Quick Reference Guide

This Technology Classroom is equipped with a touch-panel control system. All media equipment is controlled by the panel, eliminating the need for multiple remote controls.


Getting Started

Touch the Main Screen to start the system.




**System allows microphone volume control without starting-up system*

Select **YES** for system startup

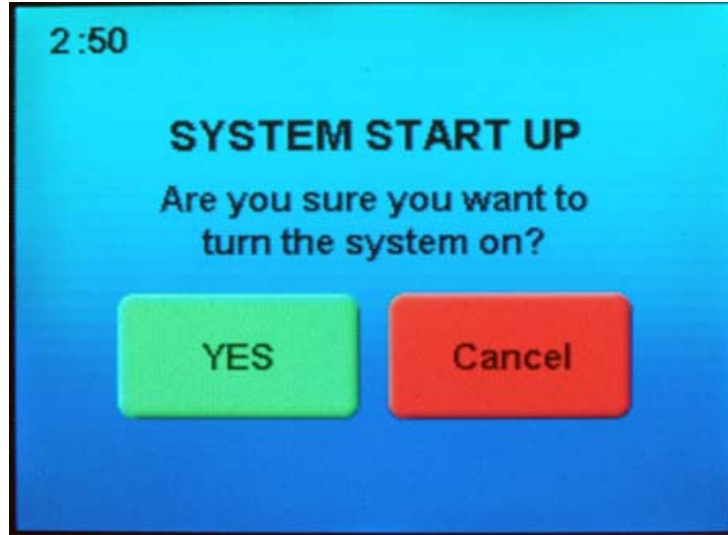


Wait for the system to start up

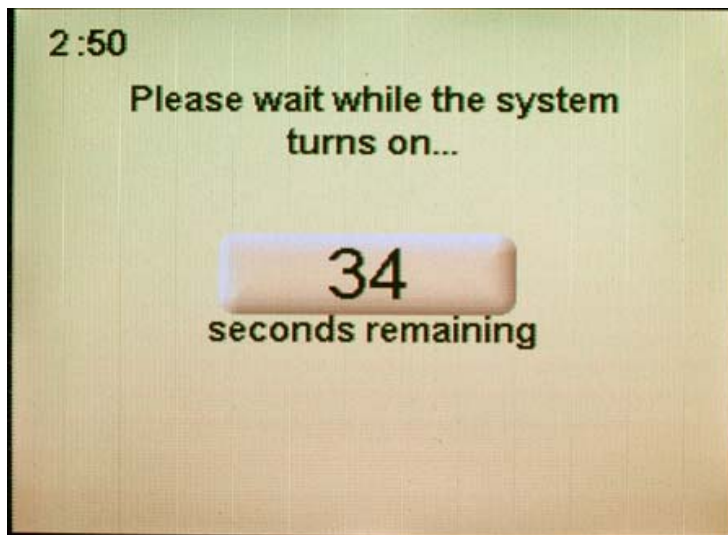


The system defaults to display the Host (built-in) computer. Select the type of media you want to display by pushing the respective button.

Below is the Main menu:

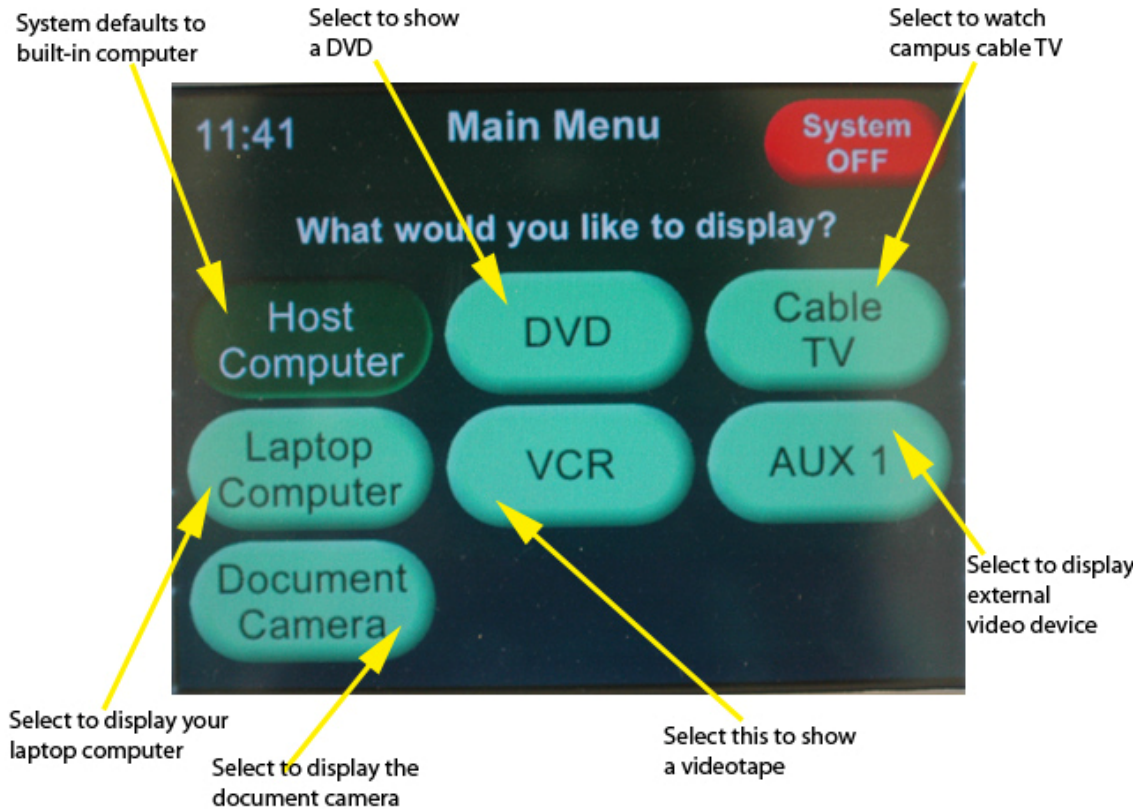

Log-in to the “Host” computer using your **MSU NetID** and **password**.

Below is the “Host” computer menu:

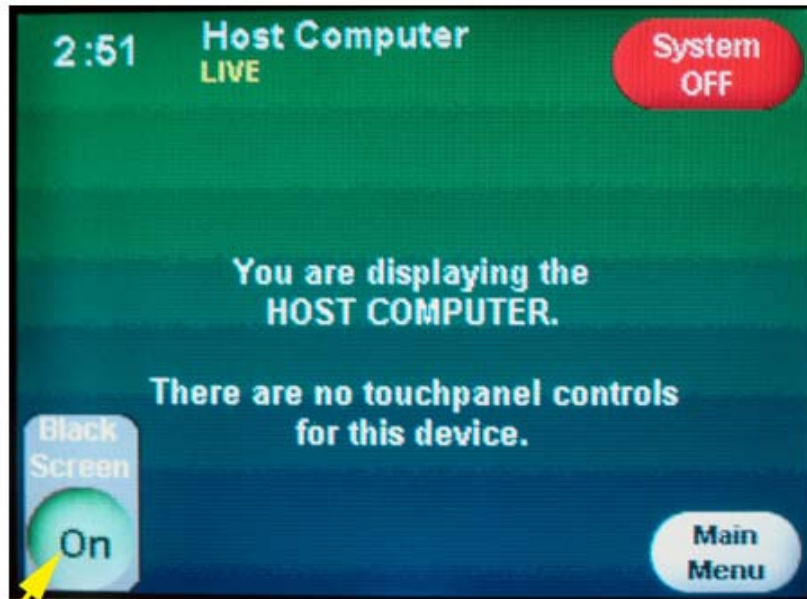

In this example the
blackscreen option is turned on

Using a Laptop

1. Connect the VGA monitor cable (attached to the side of the cart) to the **video out** port of the laptop. Macintosh users may have to use a cable adaptor (user supplied).
2. If desired, attach an Ethernet cable (user supplied) from the laptop computer into the Ethernet connection located on the side of the cart.
3. If desired, connect audio cable (attached to the side of the cart) to the laptop computer cart.
4. Press the Laptop Computer button on the touch-panel.
5. Turn on your laptop computer.

The computer image should now be visible on the projection screen. If you don't see your computer image check to make sure that your external video port on your laptop has been activated. In order to activate the external video port you may have to press a set of keyboard keys on your laptop. For example, on all Dell PC laptops you hold down the "FN" and "F8" keys. For Macintosh users, please refer to the documentation that came with your laptop.

Below is the laptop computer menu:




In this example the
blackscreen option is turned off

Below is the Document camera screen:




DVD Control Screen

Below is the DVD normal menu:

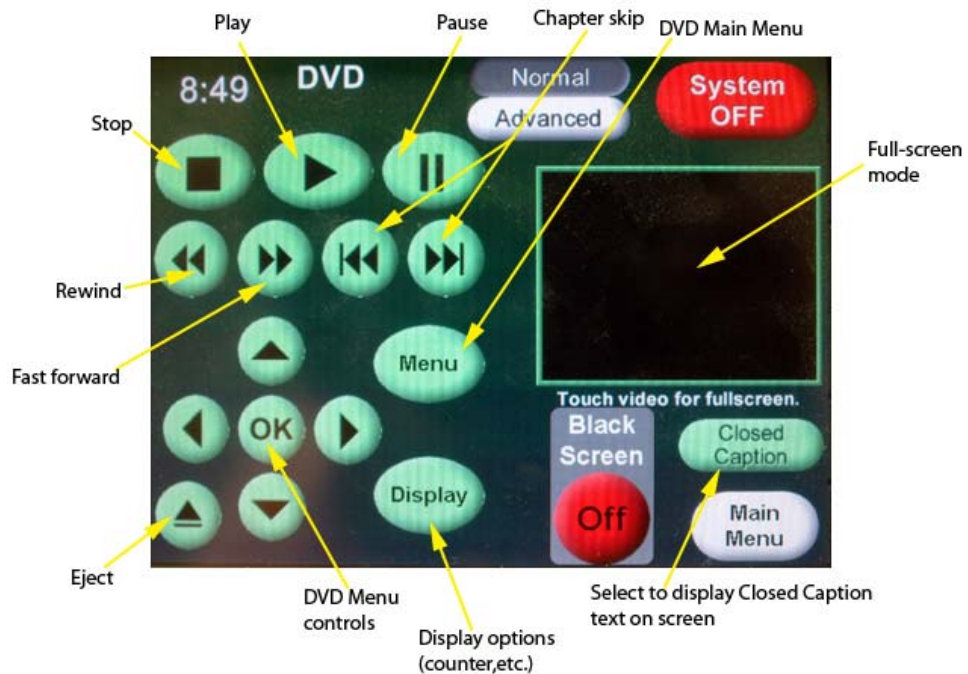


Below is the DVD advanced menu:

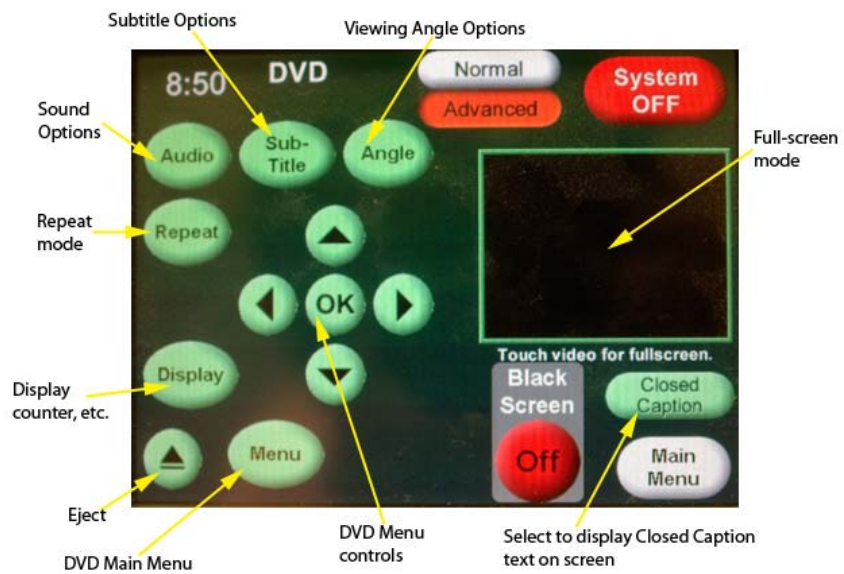


VCR Control Screen

Below is the VCR menu:

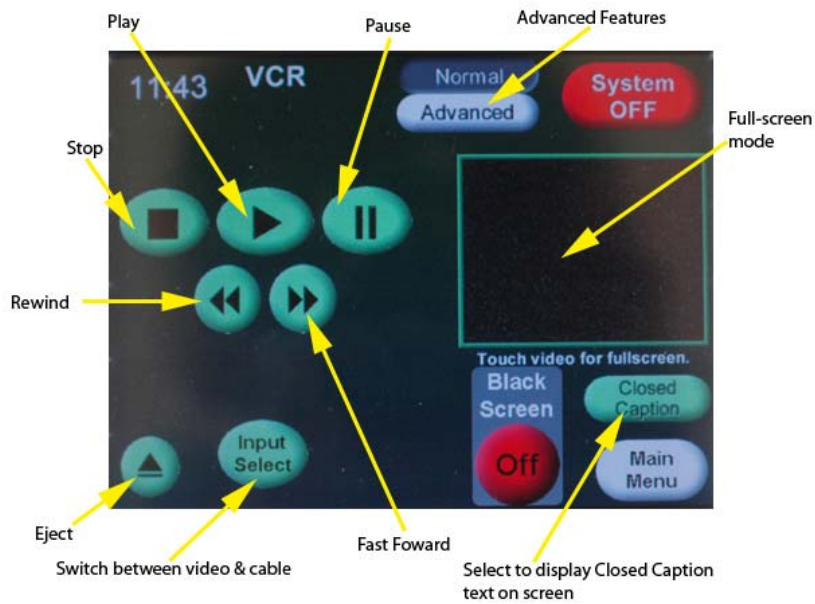

Cable TV Control Screen

Below is the Cable TV menu:

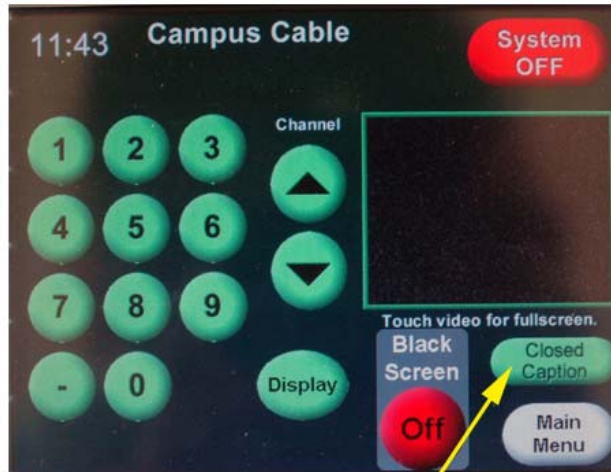

Select to display Closed Caption text on screen


Auxiliary Control Screen

Below is the Auxiliary menu (to be used with external devices - Camcorder, etc):




After Finishing

Select the System OFF button to turn off the system.

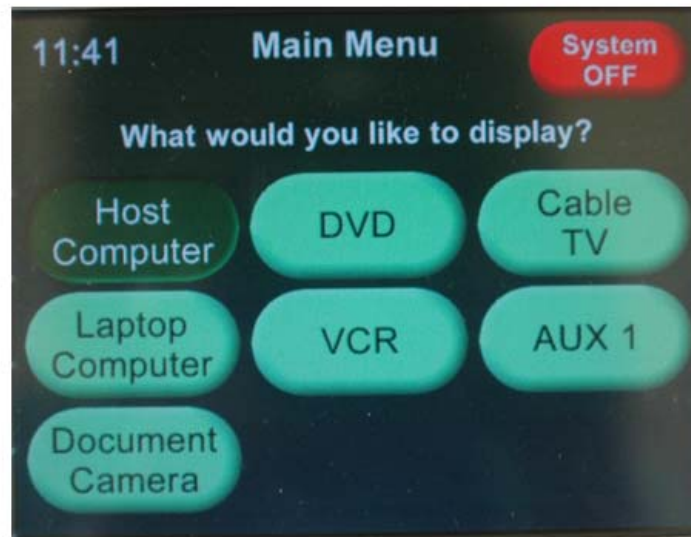

Press **YES** to shut down the system.

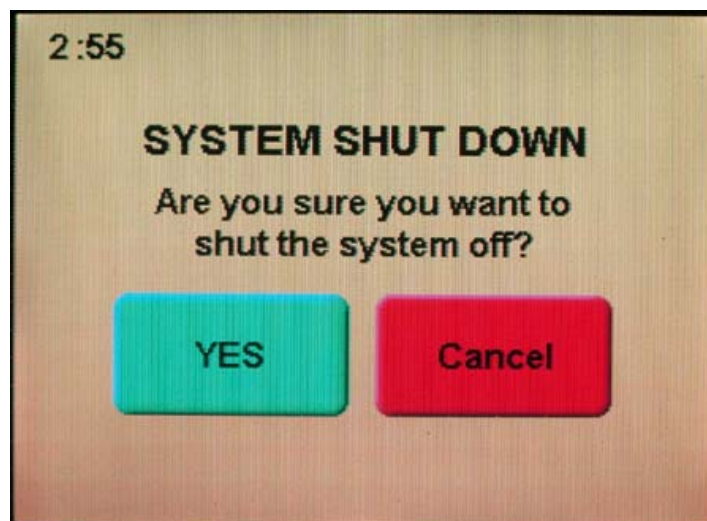

2:55

Please wait while the system
turns off...

85

seconds remaining